

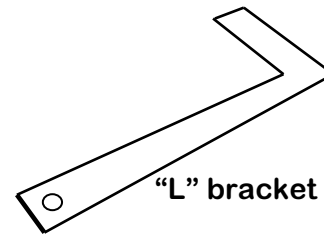
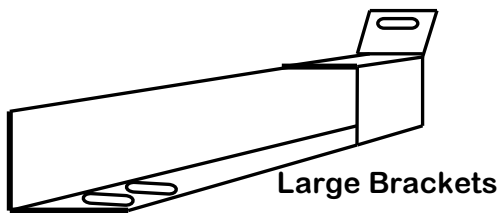


# CARGOGLIDE

## Avalanche/Cadillac EXT Installation Instructions.

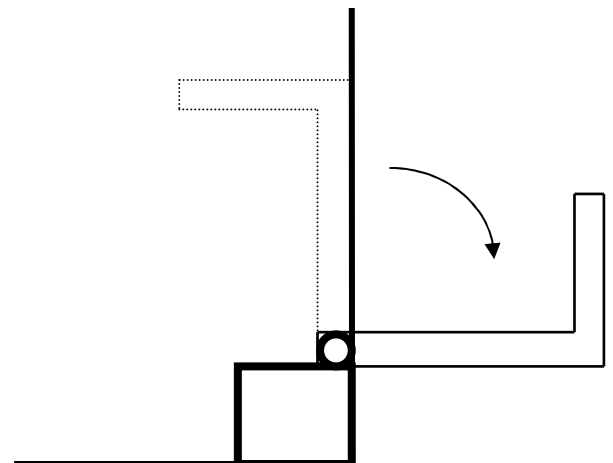

1. Locate factory tie downs at front corners of truck bed. Remove factory bolt, leave factory tie-down in place.
2. Set large brackets provided with 2 elongated holes facing down and to back of truck, with side hole lining up to factory tie-down at front corner of truck. Install 4 provided bolts in slotted holes in brackets with threads up, leave nuts and washers off at this point. Re-insert factory bolt through side hole in bracket and leave slightly loose.
3. "L" shaped brackets are attached to underside of frame. (At rear corners, Tailgate end). Set unit in truck and swing "L" shaped brackets attached to underside of CargoGlide (at tailgate end) out to side walls of truck, tighten 1/2 bolt under CargoGlide frame. "L" Brackets

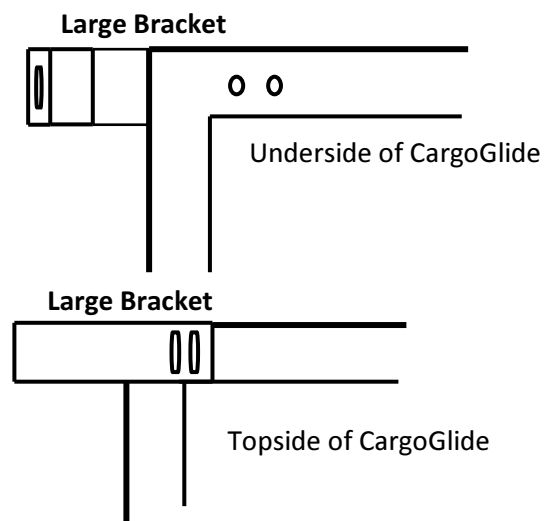

are designed to simply hold the CargoGlide in center of truck.

4. Open CargoGlide enough to expose front cross member, set cross member over matching holes of front brackets. Use provided washers and nuts to tighten CargoGlide in place. Tighten all nuts and bolts.
5. Thanks for purchasing a CargoGlide product, now have fun with your new CargoGlide!

**Any questions or comments please call or email us at:**

**877-525-9535 or [support@cargoglide.com](mailto:support@cargoglide.com)**

**We like to see pictures of your new CargoGlide in the truck! Send us a photo!**